


# Window film installation is SIMPLE!

READ SHEET FIRST: Schedule installations indoors in mild temperatures, not too hot or cold. If installing during summer, install in the morning when the glass is cooler & sun isn't shining directly on glass  
TEST INSTALL A NON PRINTED SECTION OF FILM FROM YOUR ROLL BEFORE DOING THE REST



Tools needed:  
Scissors,  
Tape Measure,  
razor blade,  
window cleaner  
such as windex,  
squeegee,  
spray bottle  
(garden type  
pump sprayer  
recommended),  
liquid dish detergent,  
paper towels.

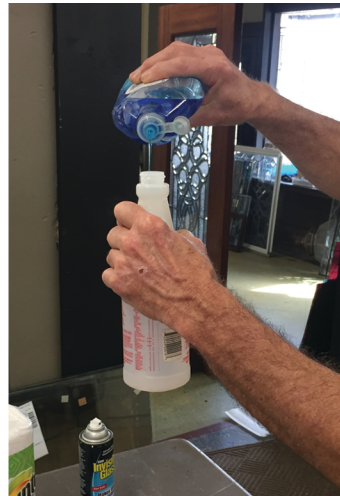

Mix your solution.  
We generally use a  
solution of water  
mixed with about  
18-22 drops liquid dish  
liquid (such as dawn)  
per 32 oz of water..  
*(This ratio can be adjusted  
higher or lower after  
your sample install, based  
on your preferences)*  
*\*For PLEXIGLASS add 50%  
more soap to your solution*

1. Carefully clean  
glass where  
the window film  
will be applied.  
(INSIDE ONLY)  
Be sure to remove  
all traces of dirt,  
especially around  
the edges. Razor  
blades are good  
for removing debris  
\*on PLEXIGLASS  
clean to remove  
static electricity



2. Measure & mark  
the center point of  
your window with  
your sharpie on  
the top and bottom  
parts of the window.  
This will aid you in  
positioning the  
center of your  
window film when  
you place the film  
on the glass & slide  
it around



3. Do the next  
step with film on a  
table sprayed with  
solution: Place the  
printed part of film  
down on the table.  
Carefully cut out  
your film. (water  
sprayed on your  
table helps keep  
film from sliding  
around for the  
next step)



4. Slowly peel  
off the backing  
to your film and  
spray your film as  
you peel with  
your soapy solution.  
Be careful  
when peeling  
so image doesn't  
fold over on itself.