

5. Spray solution over film and window completely. This soapy spray gives flexibility when placing film on glass, allowing you to slide the image around to the proper position.



6. Carefully transport your film sticky sprayed side away from you to your wet window. Walk carefully enough to keep the film steady, (which makes the next step easier)




7. Carefully place your film on your glass and slide it into place making sure you hand smooth out any large bubbles from the back the soapy spray should allow you to freely glide the film over your window.



8. Squeegee a small section of film, up top. Start with minimal pressure, then add more pressure as more air and bubbles are pushed out. Spraying the front of your film makes this step easier allowing the squeegee to glide over the film easily

9. After tacking down the top section (diagram A) slowly work a center path down the middle of the film (diagram B) and then work the sides in the direction of the arrows from the top to the bottom. This is easier than you think.

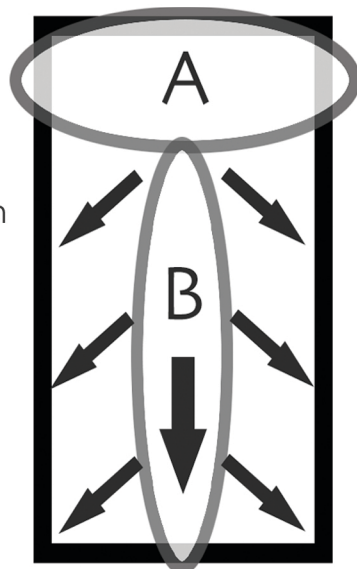

10. If applicable, install moulding around edges. If you dont have moulding, we can supply you with black finishing tape (extra cost) which is installed when film is dry along the edges to give a finished look. Your black tape or moulding will act mainly to fill in any gaps between the edge of the film and the frame.



Have any other questions about your install, feel free to call us at 800-291-3739